


PERSPECTIVE VIEW

ASSEMBLY:

1. Attach tie braces to legs but do not tighten wing nuts.
2. Loosen wing nuts on clamp plates (plates, once installed, remain on box).
3. Insert legs in sockets and tighten wing nuts.
4. Tighten tie brace nuts.

To disassemble, reverse above procedure.  
Store legs and braces inside box.

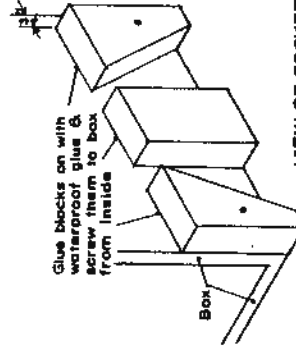

VIEW OF SOCKET BLOCKS IN PLACE ON BOX END

3/98



ENGINEERING SERVICE  
BOY SCOUTS OF AMERICA  
1325 West Walnut Hill Lane  
Irving, Texas 75015-2079

CAMPSITE FOOD CHEST

DESIGN STANDARD  
44

